



QUADRANT

Brooklyn reel

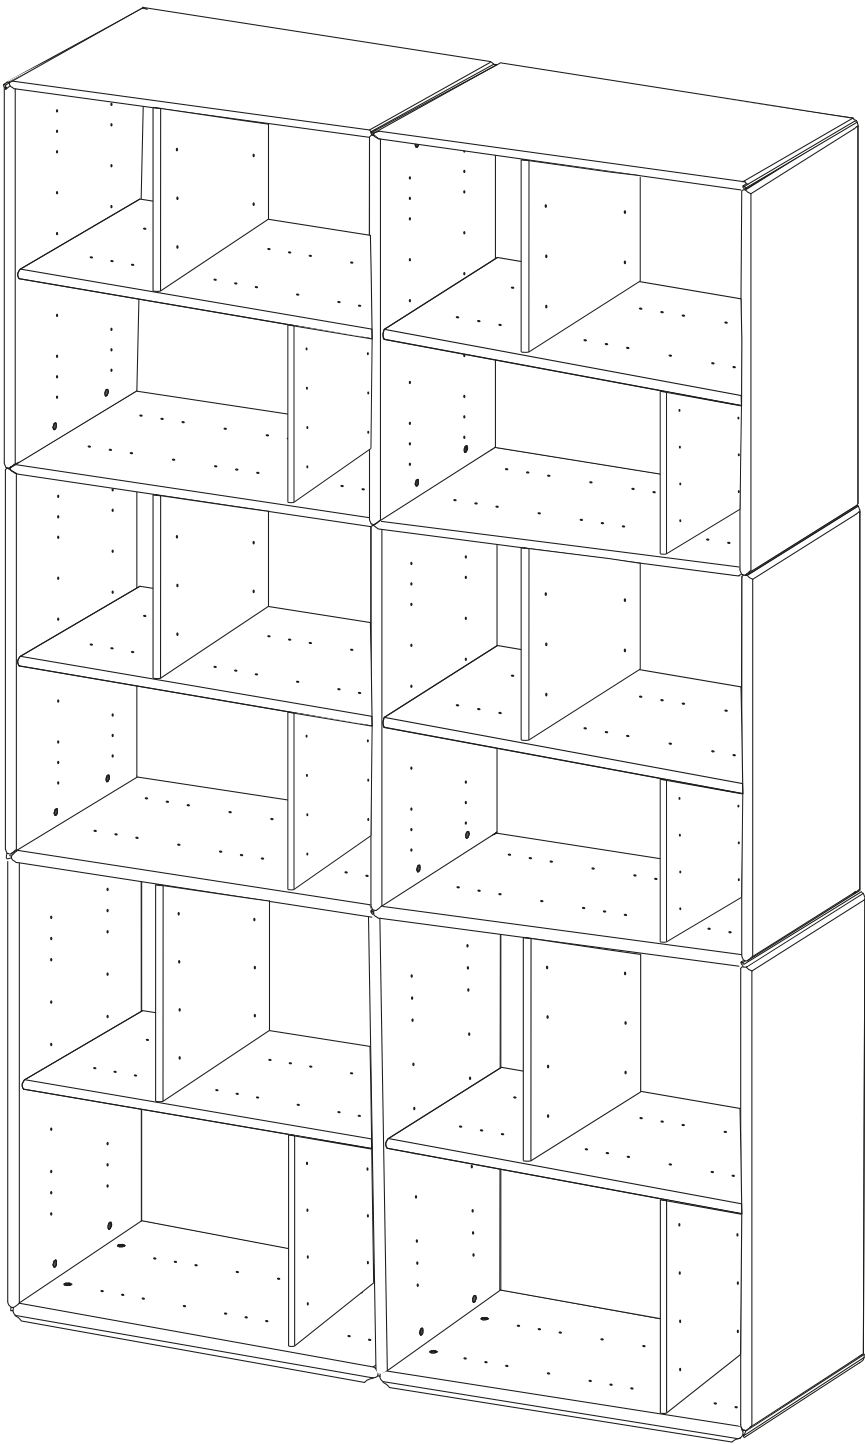

Brooklyn reol

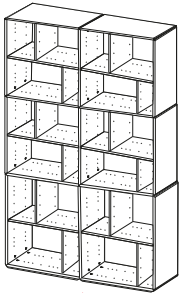


Korpus - Korpus - Carcase - Carcasse

405733	415733	445733	215757	385733	302833
Udvendig side 324×572 mm (8 styk)	Mellem side 324×572 mm (7 styk)	Bund til stillesko 324×572 mm (2 styk)	Bagbeklædning 570×570 mm (6 styk)	Skillevæg A 306×564 mm (6 styk)	Skillevæg B 177×295 mm (12 styk)

Beslag - Beschl ge - Fittings - Set de montage



A x 4	B x 2	C x 4	D x 28	E x 12
L- Beslag (9990200033) (4 styk)	T- Beslag (9990200333) (6 styk)	X- Beslag (9990203333) (2 styk)	L�sestift (68 styk)	Tr�dhyldeb�rere (36 styk)

Beslag for Stillesko - Beschl ge f r Gleiter - Fittings for adjustable feet- Set de montage




V1 x 8
Stillefod
(8 styk)


V rkt j - Werkzeuge - Tools - Outils

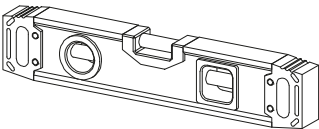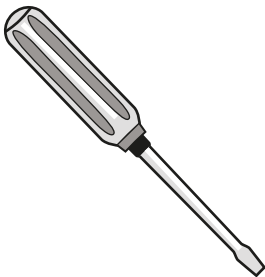


①

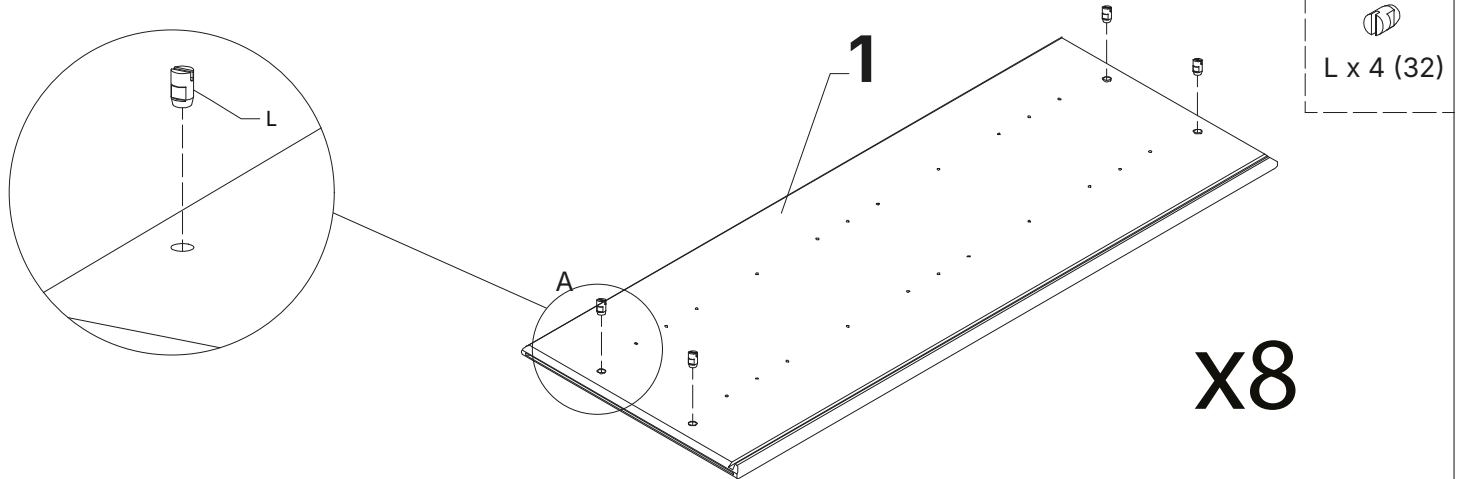


②

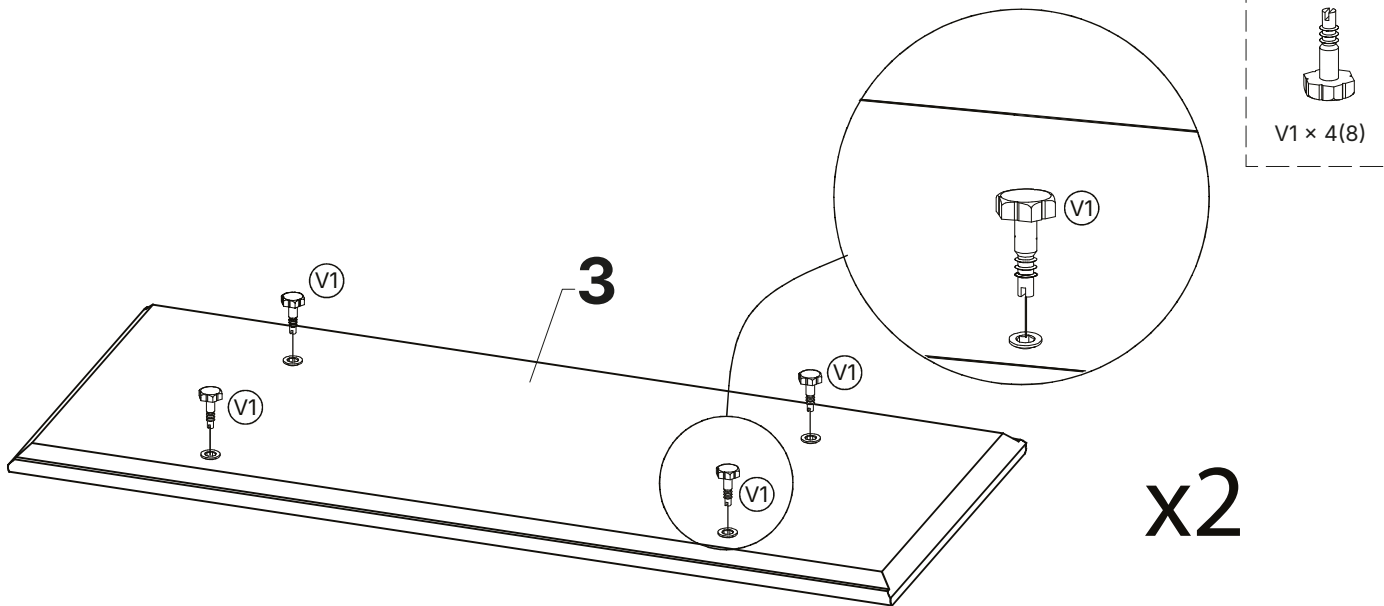


③

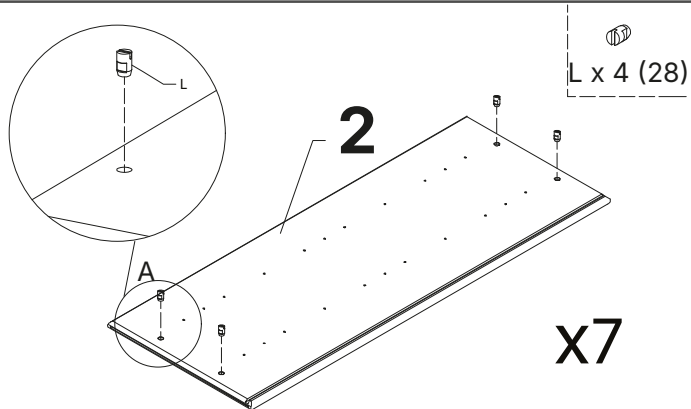


④

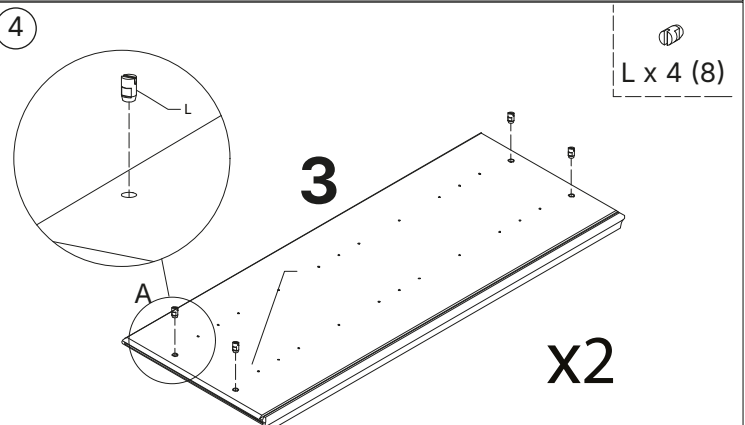


⑤

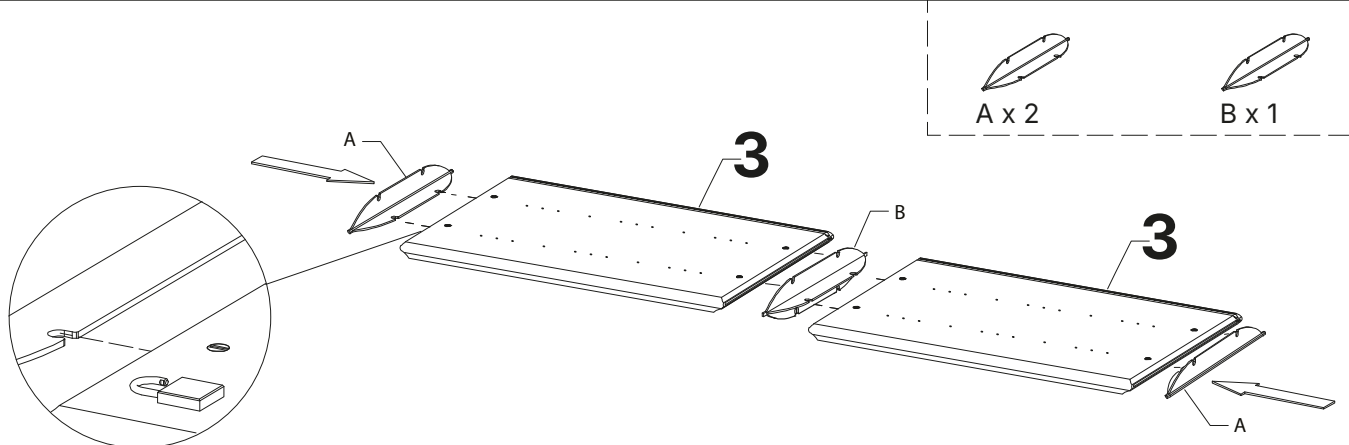


6

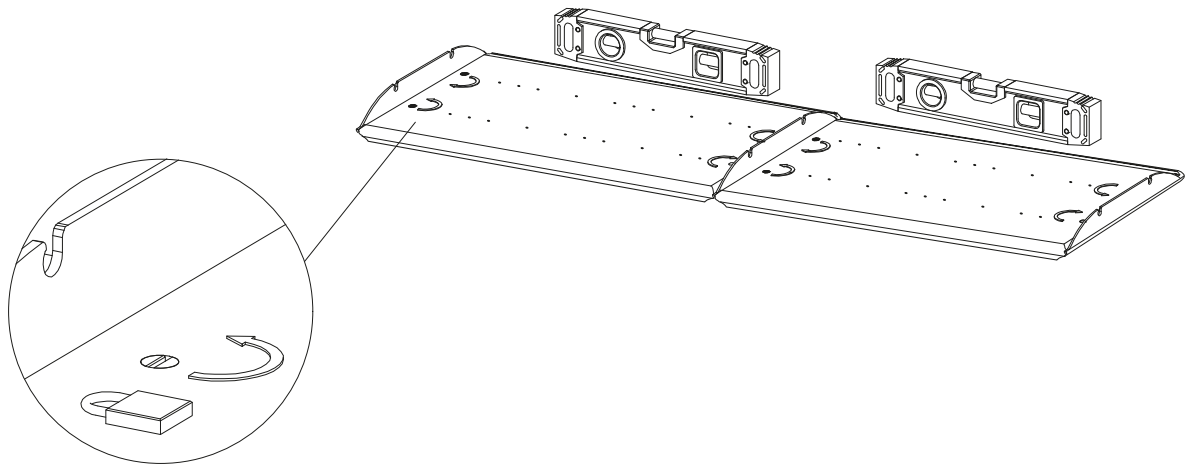


7

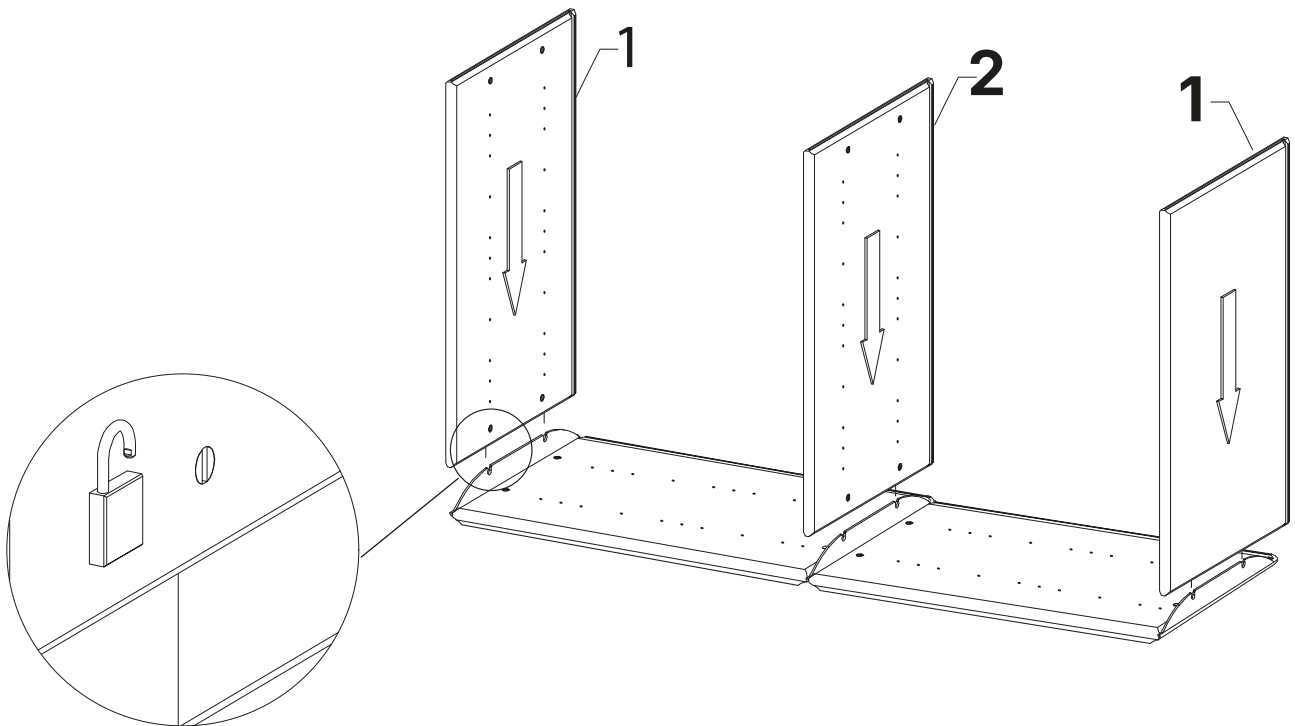


8

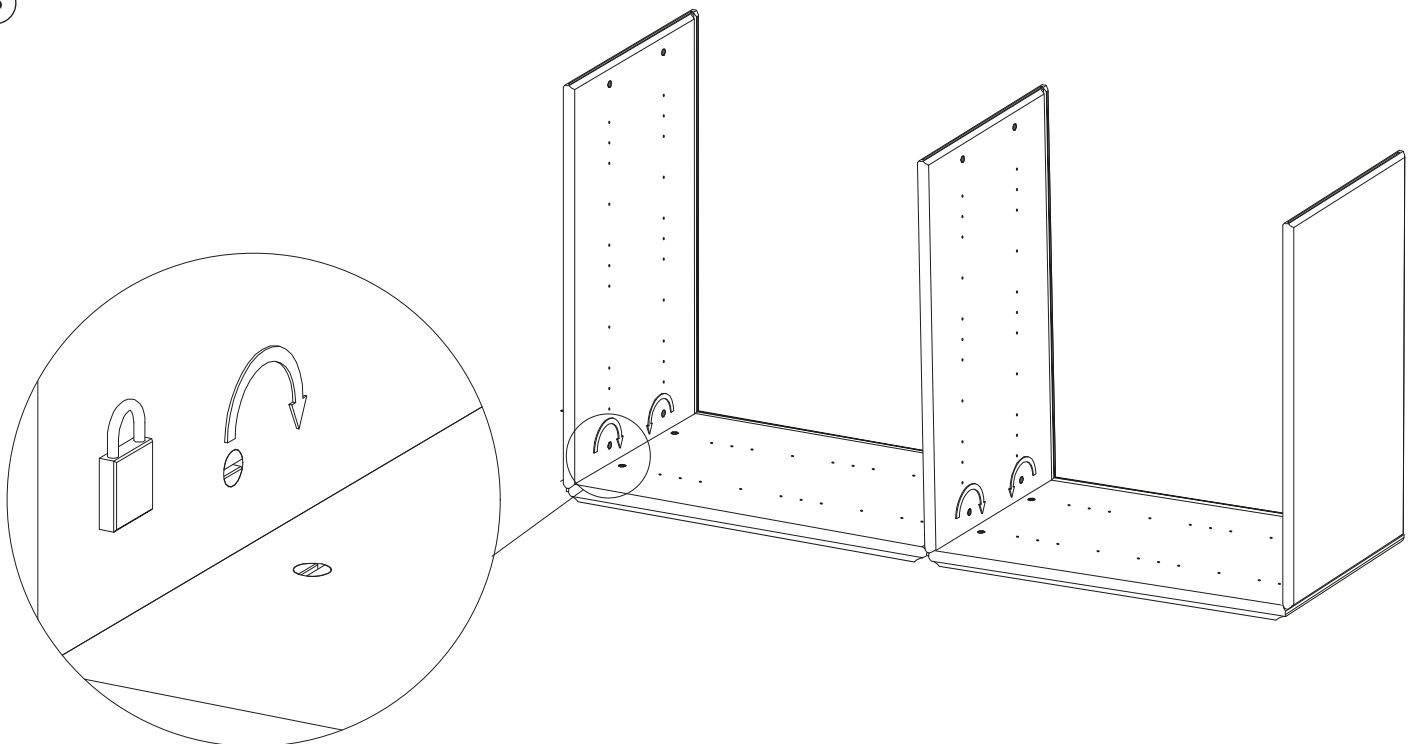


9

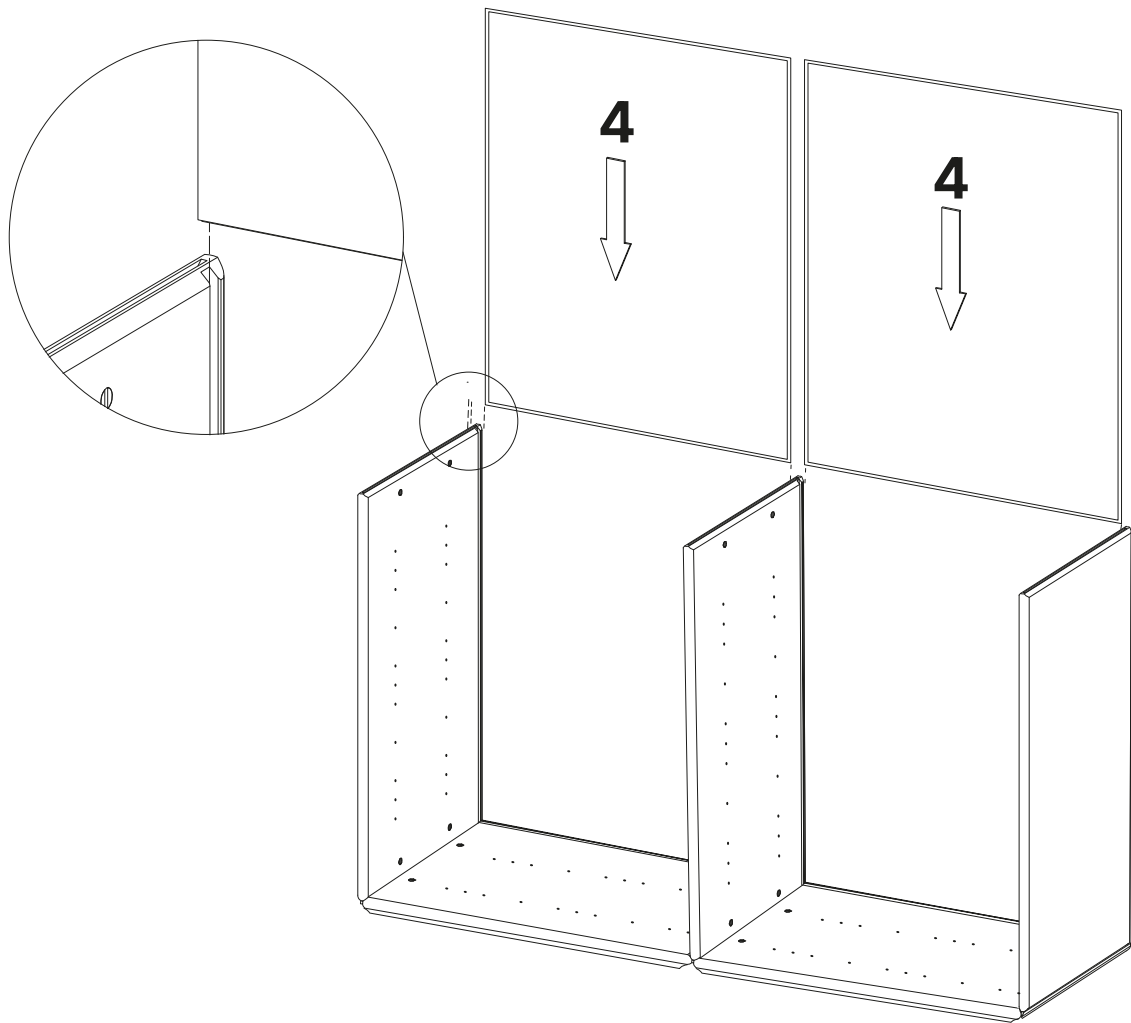


10

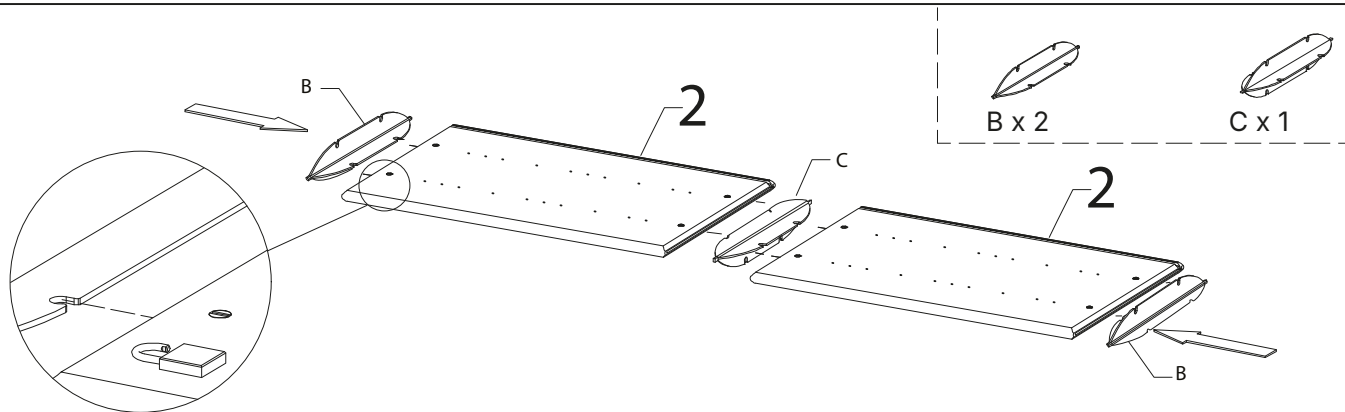


11

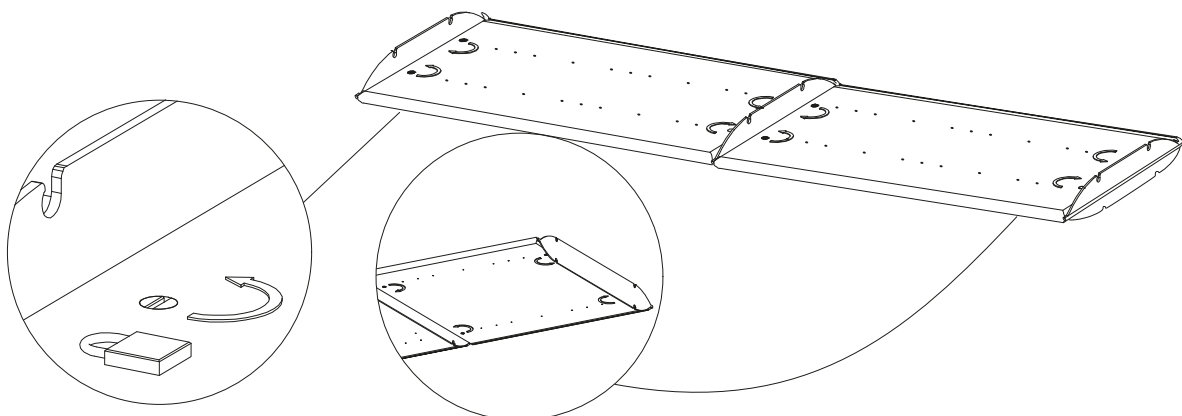


12

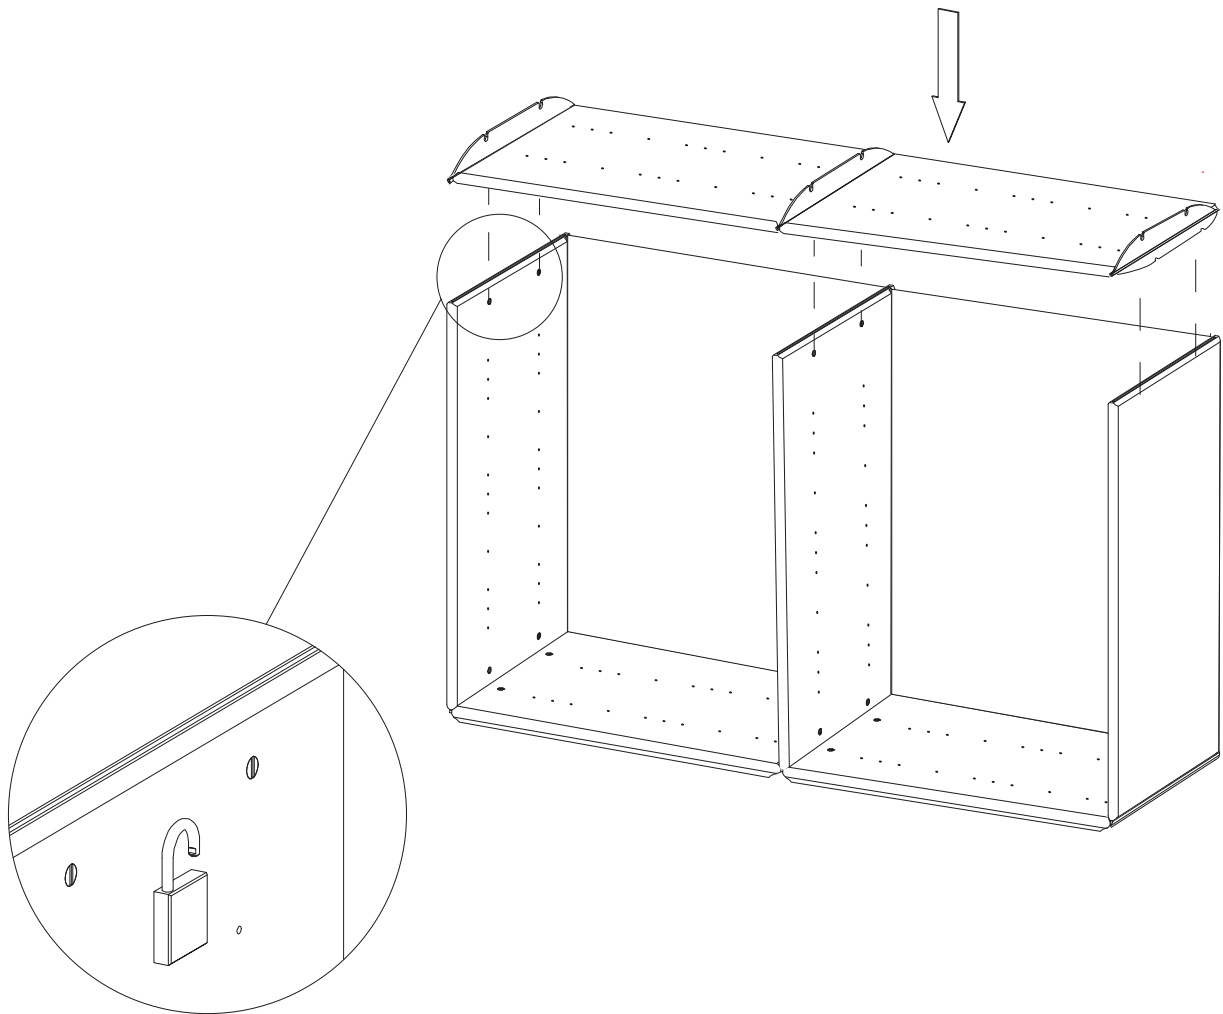


13

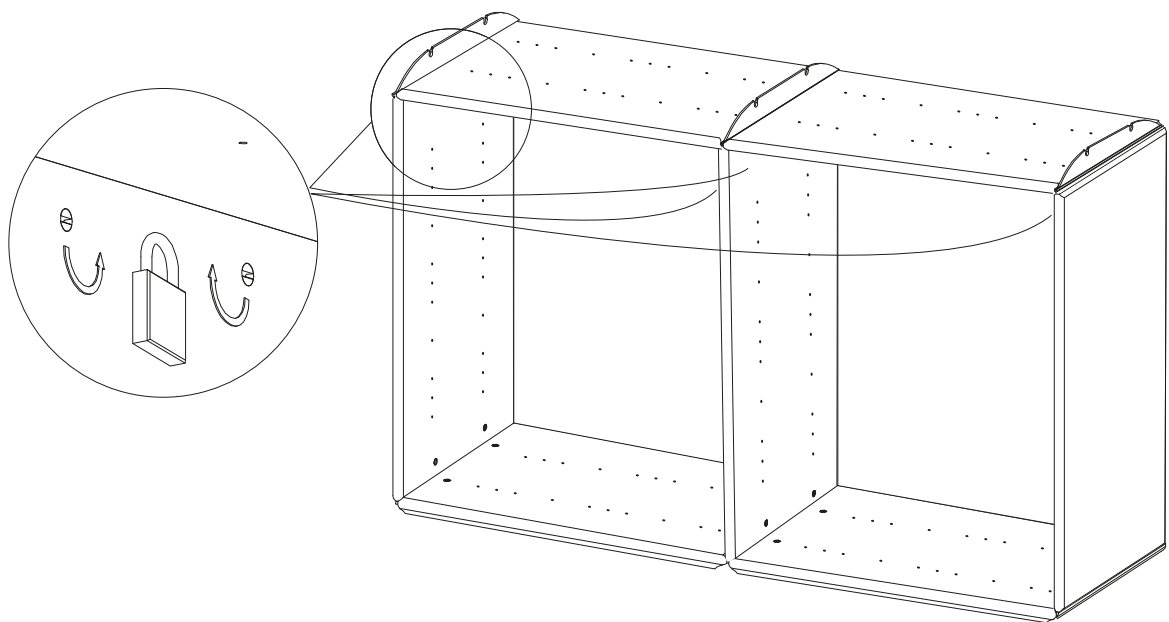


14

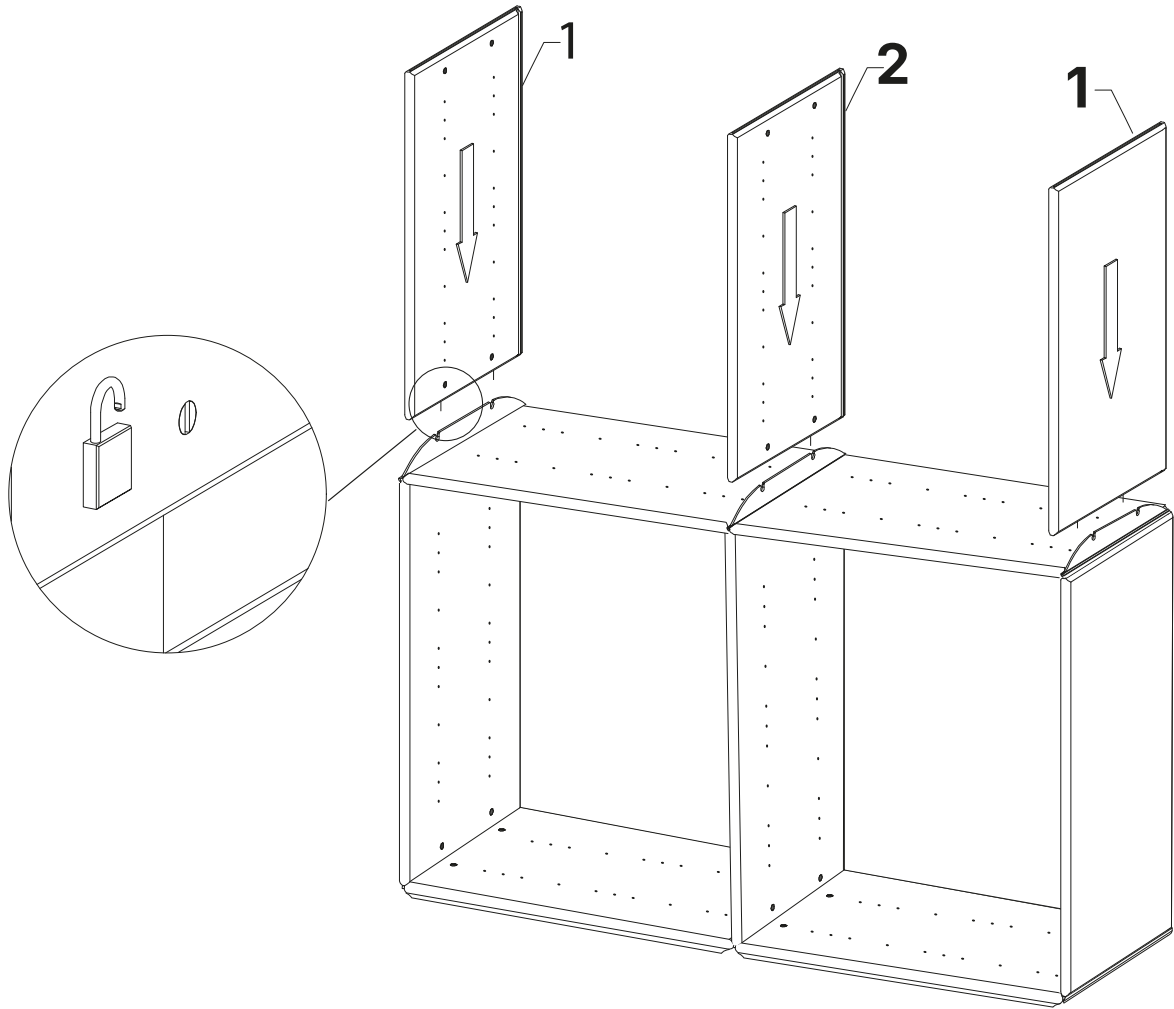


15

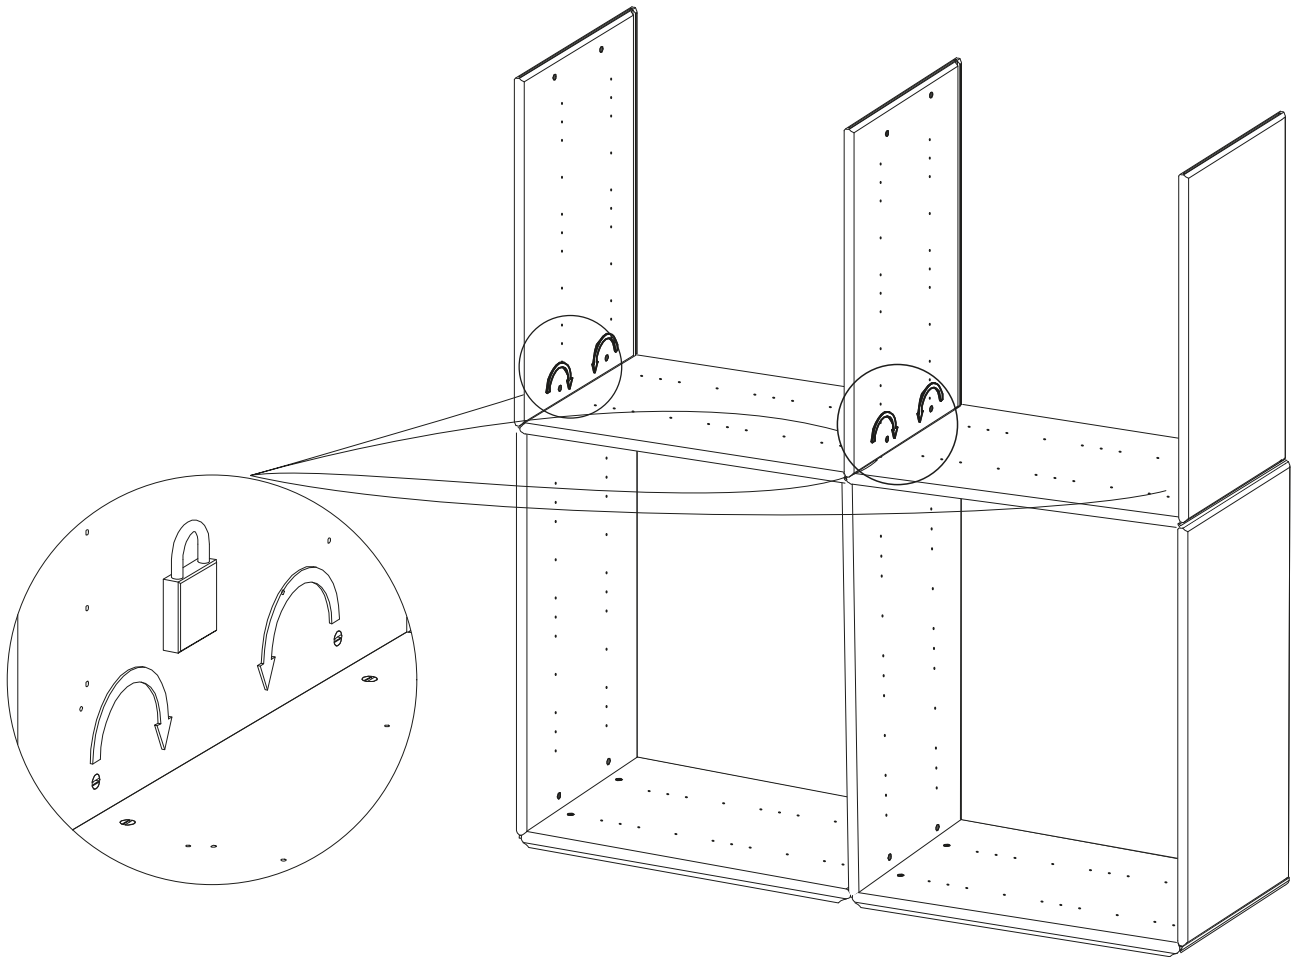


16

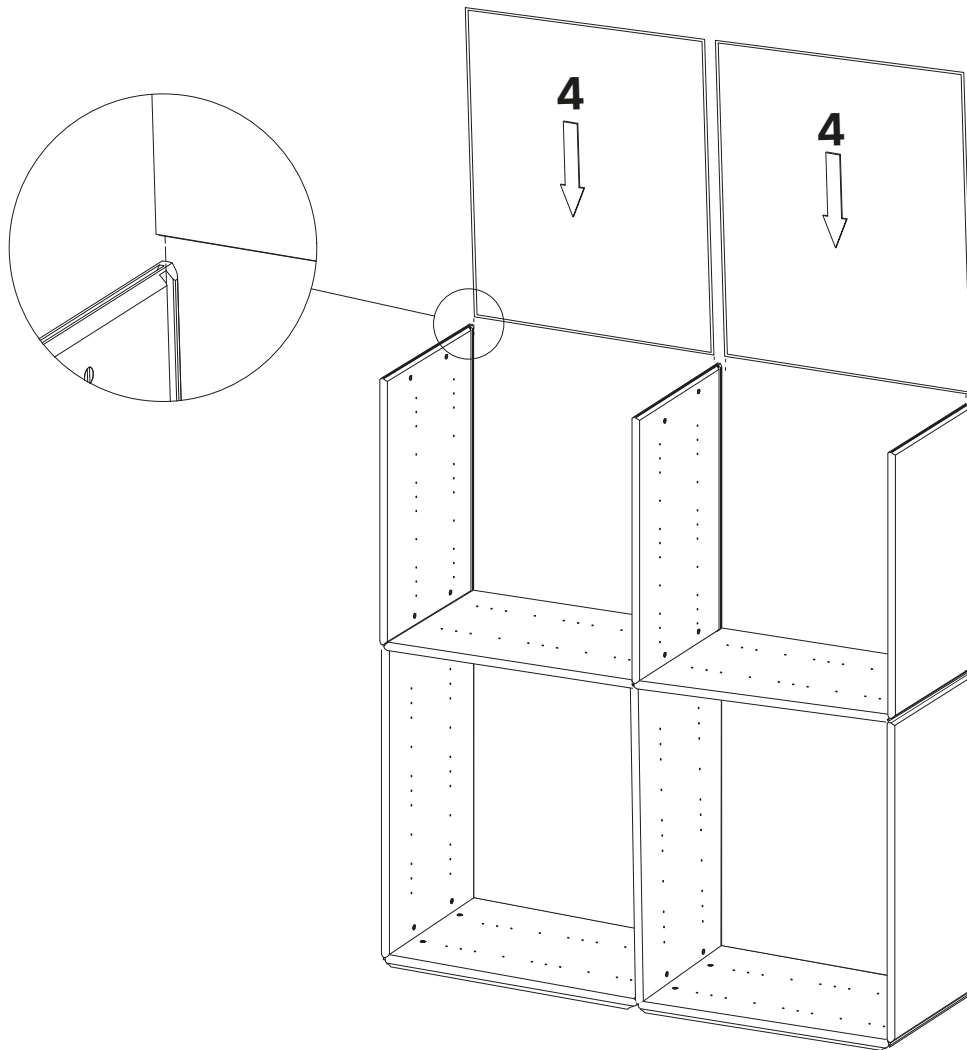


17

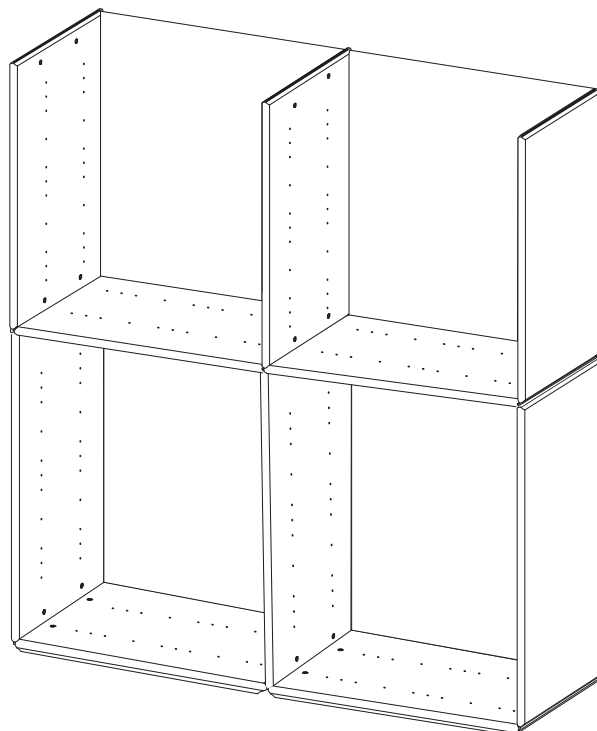


18

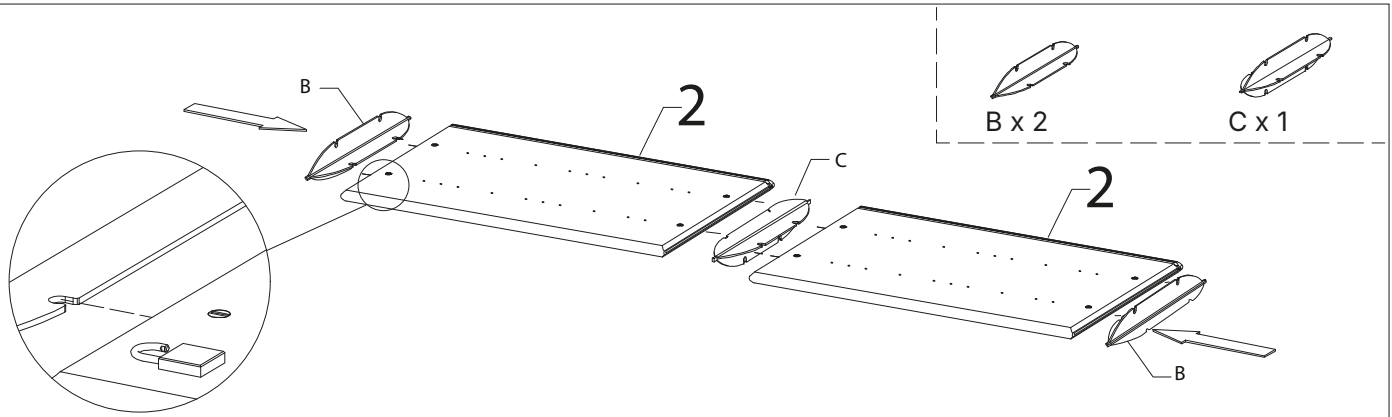


19

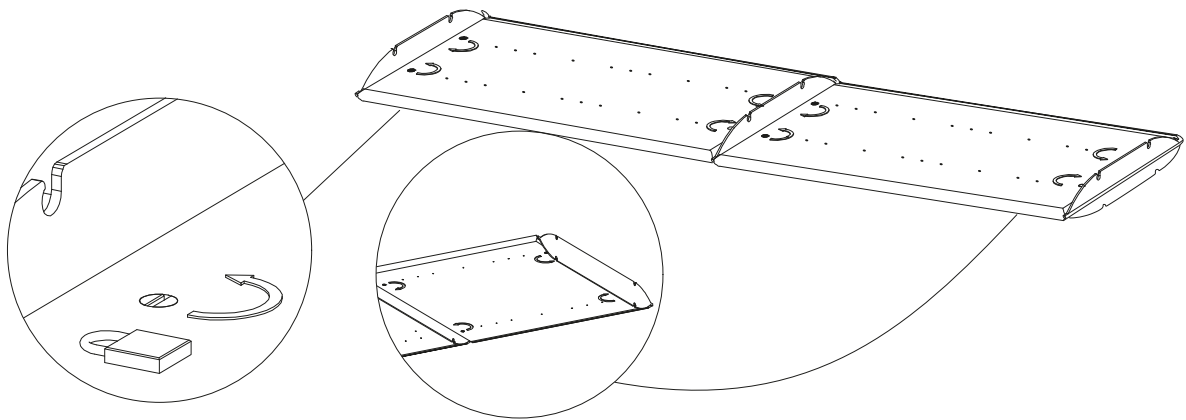


20

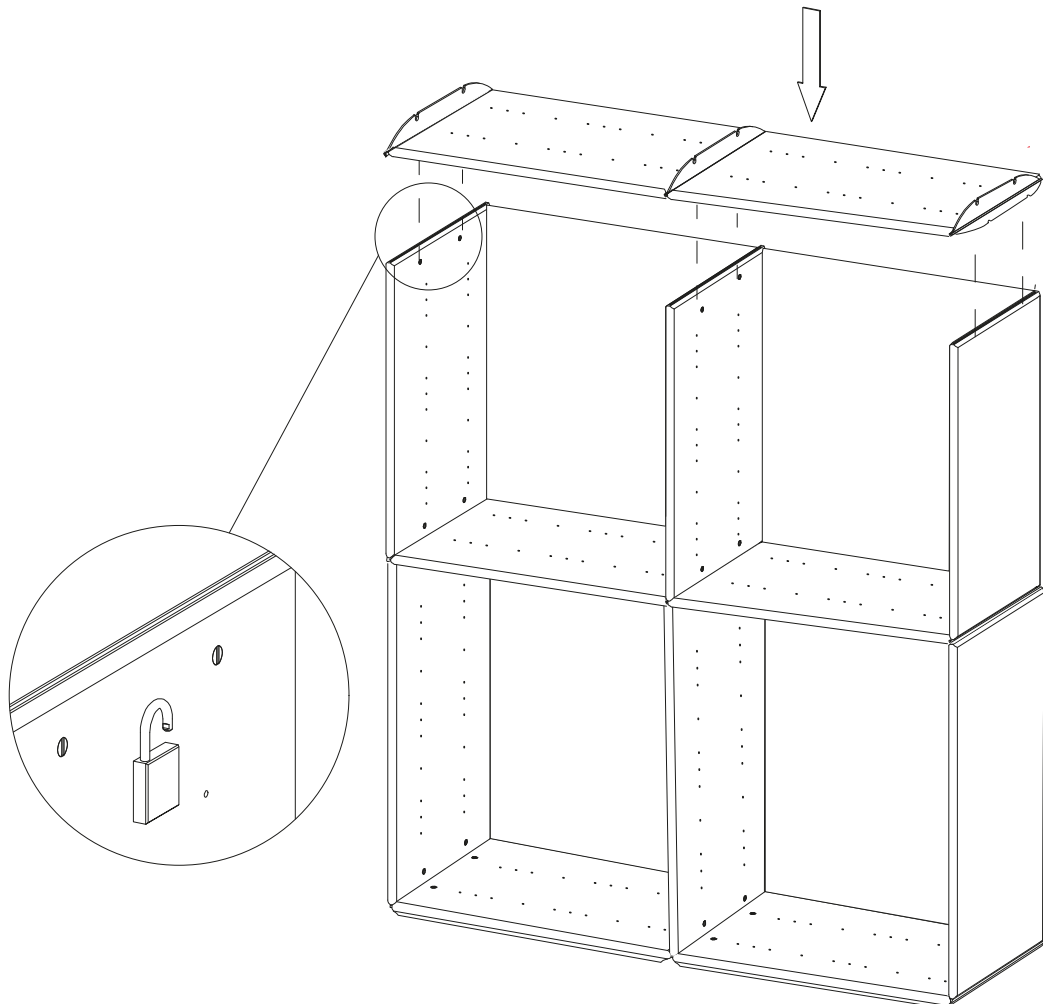


21

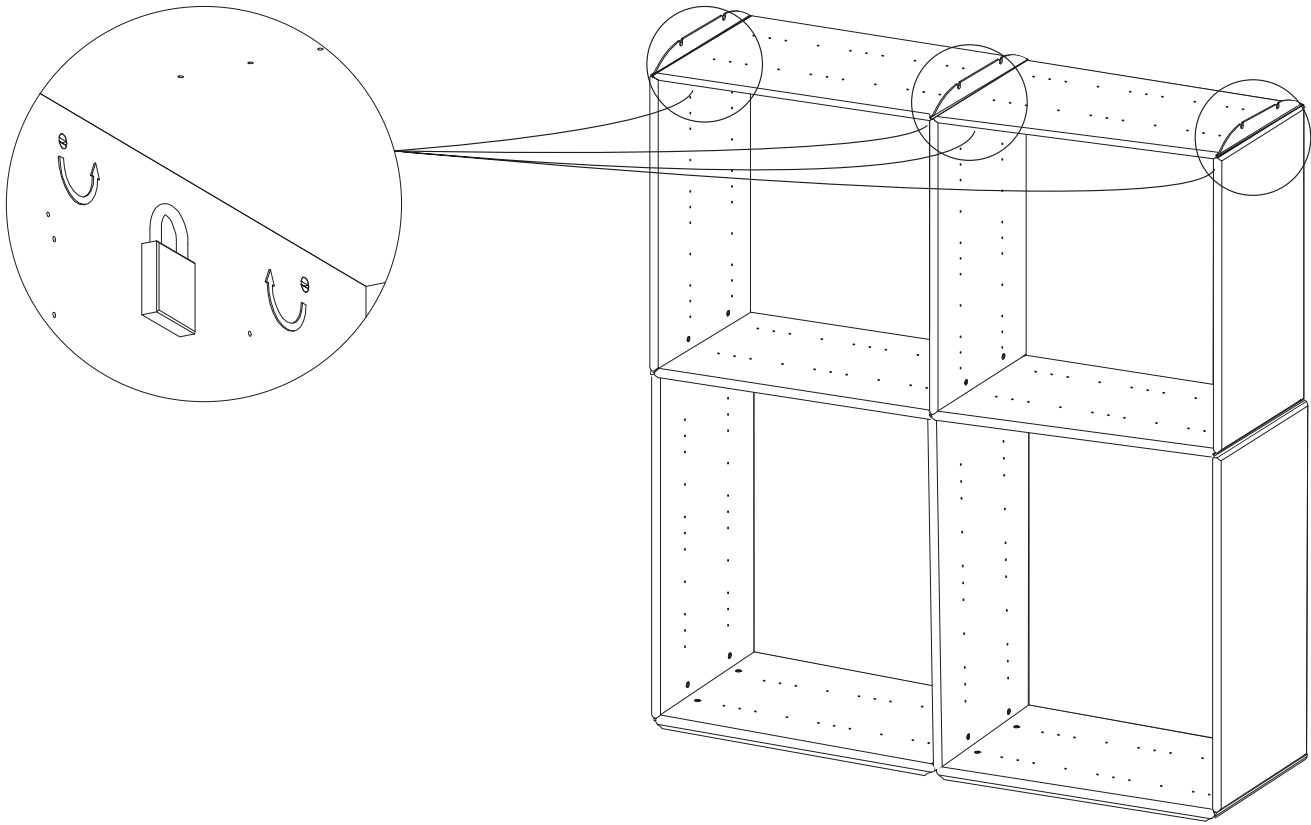


22

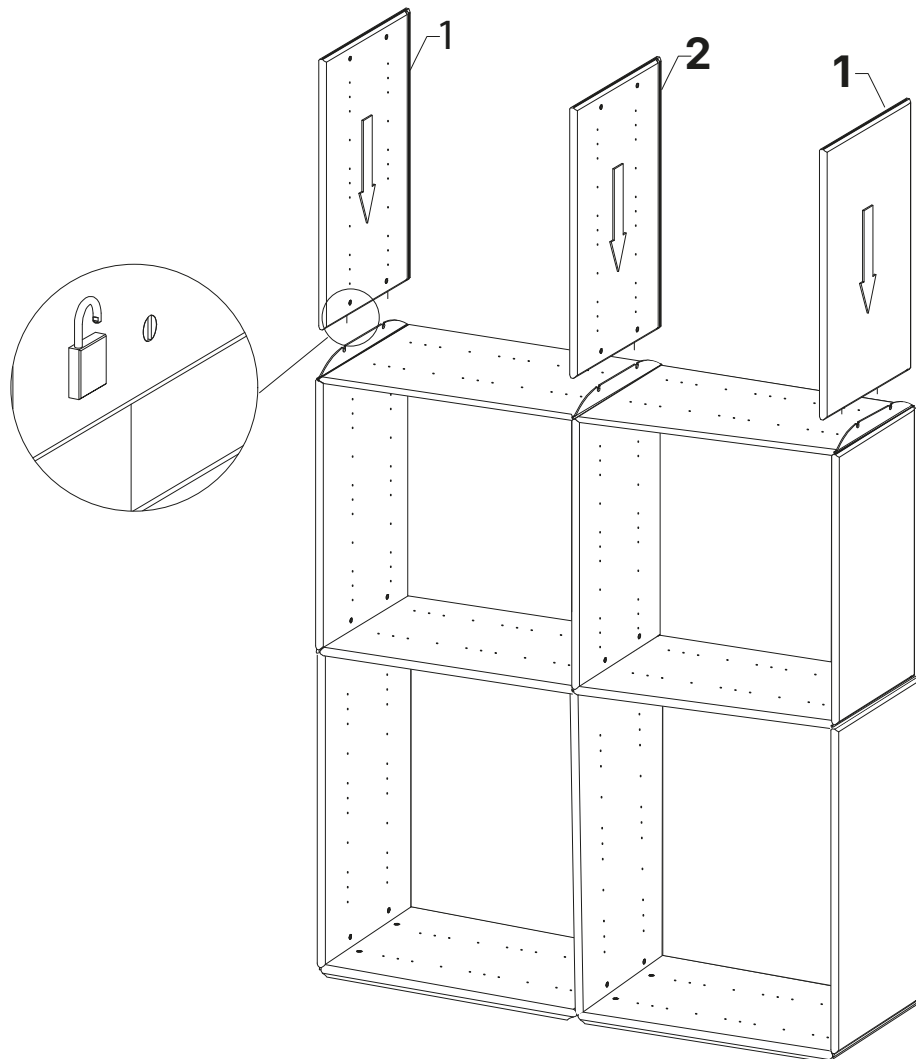


23

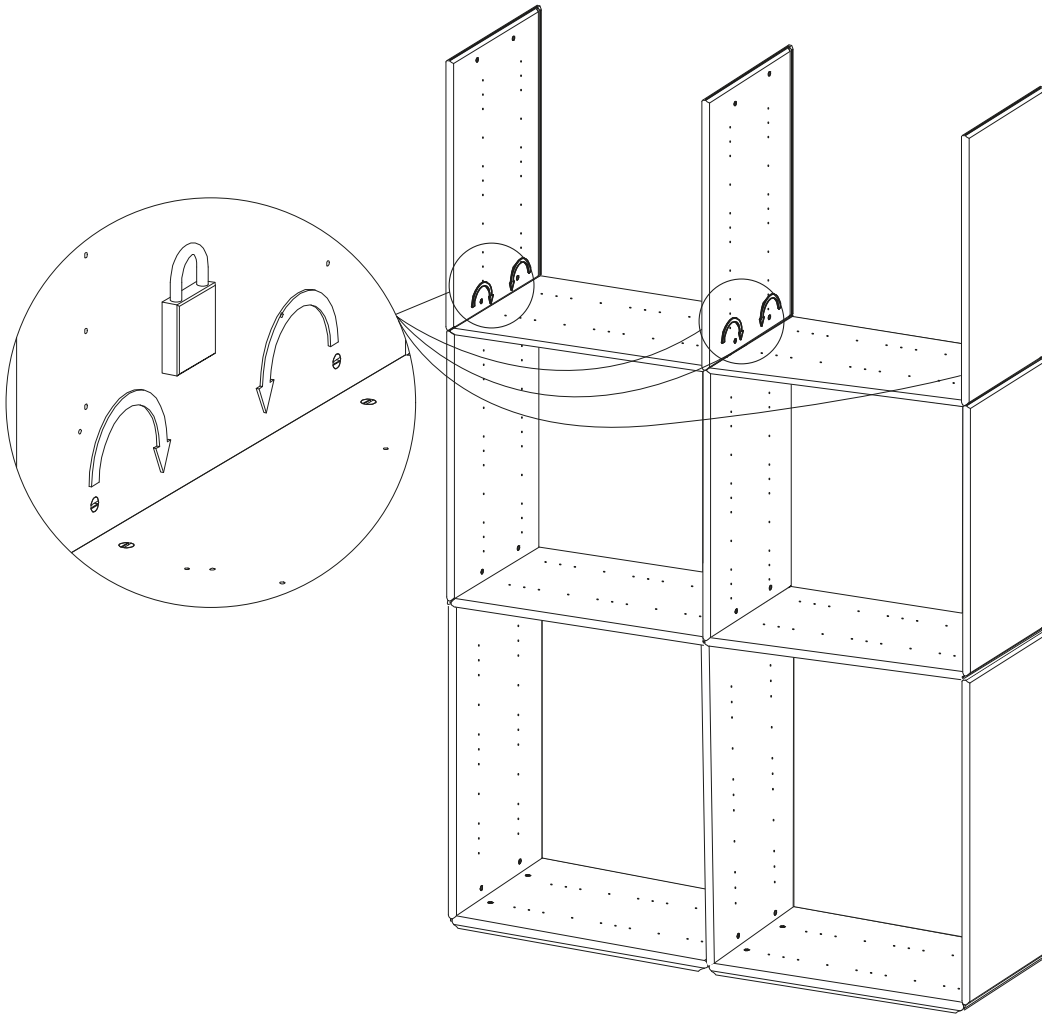


24

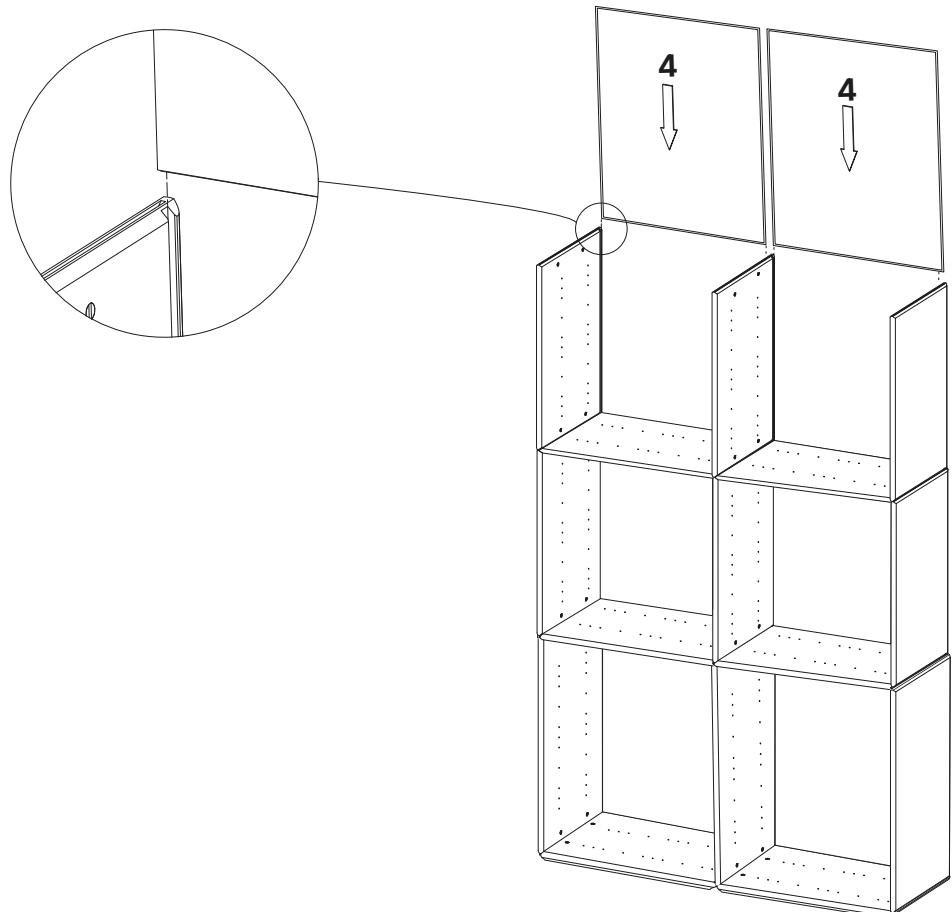


25

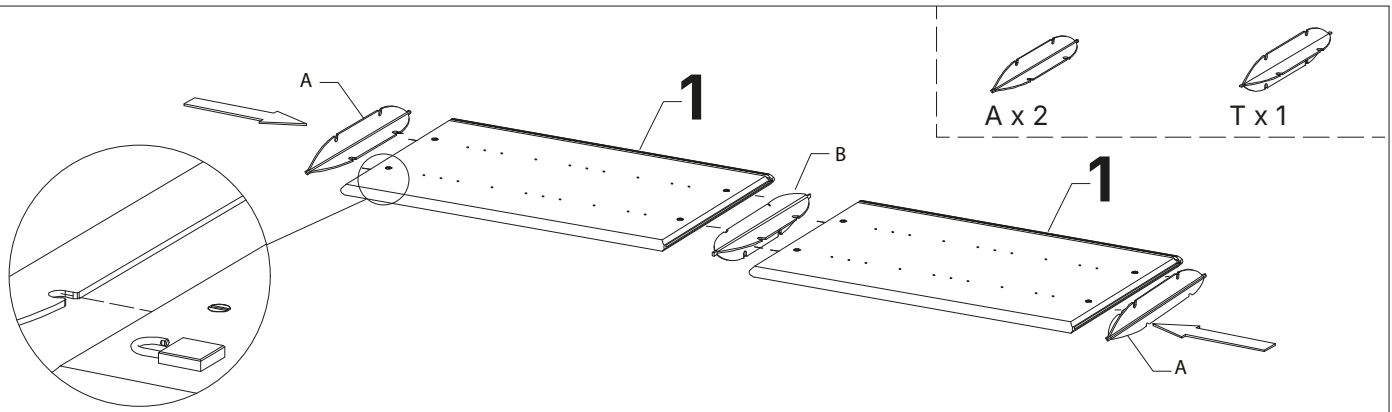


26

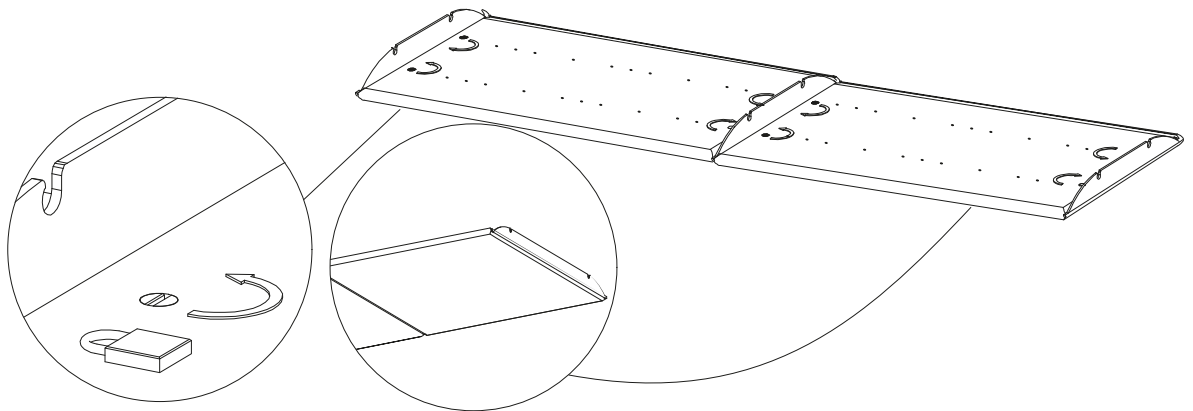

27

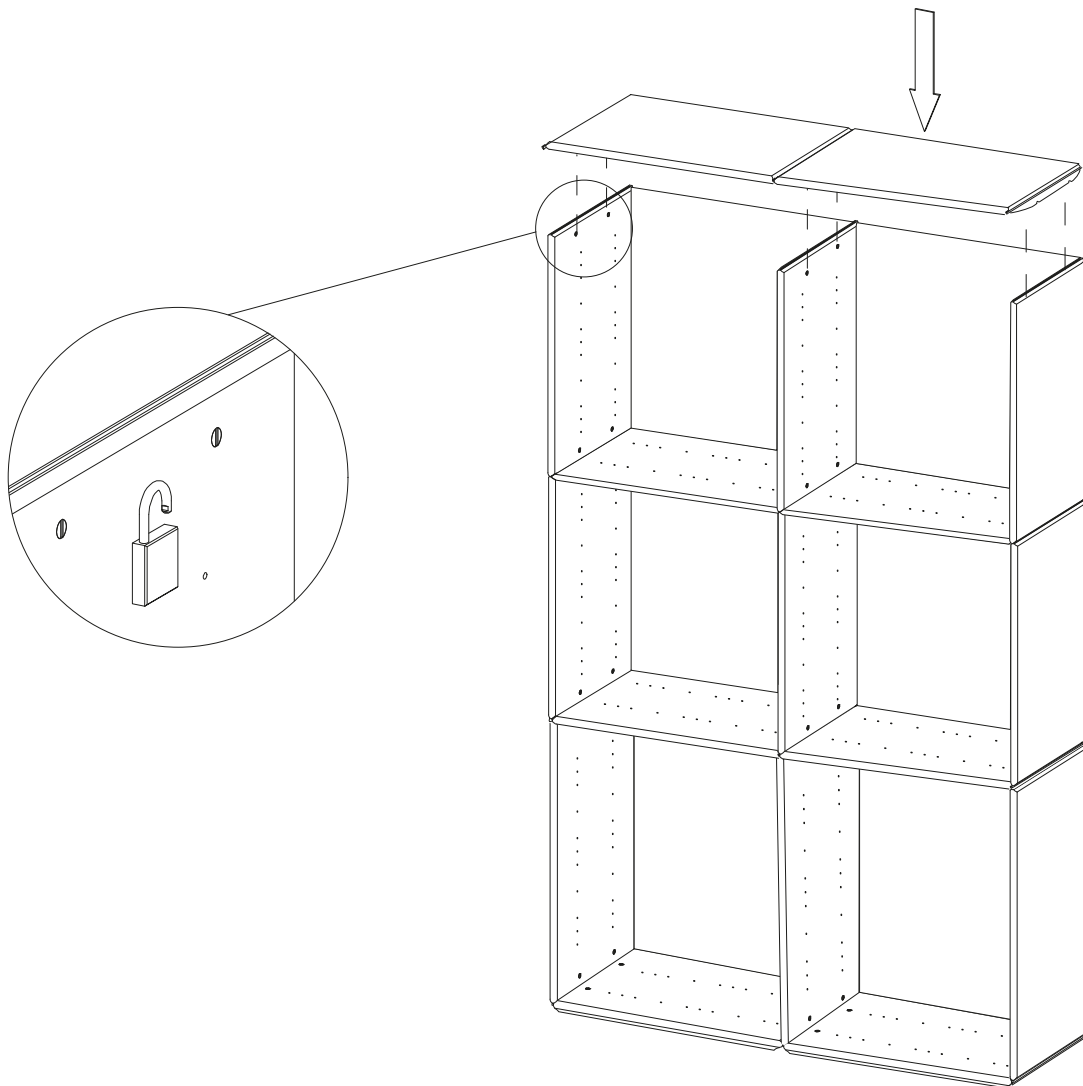

28

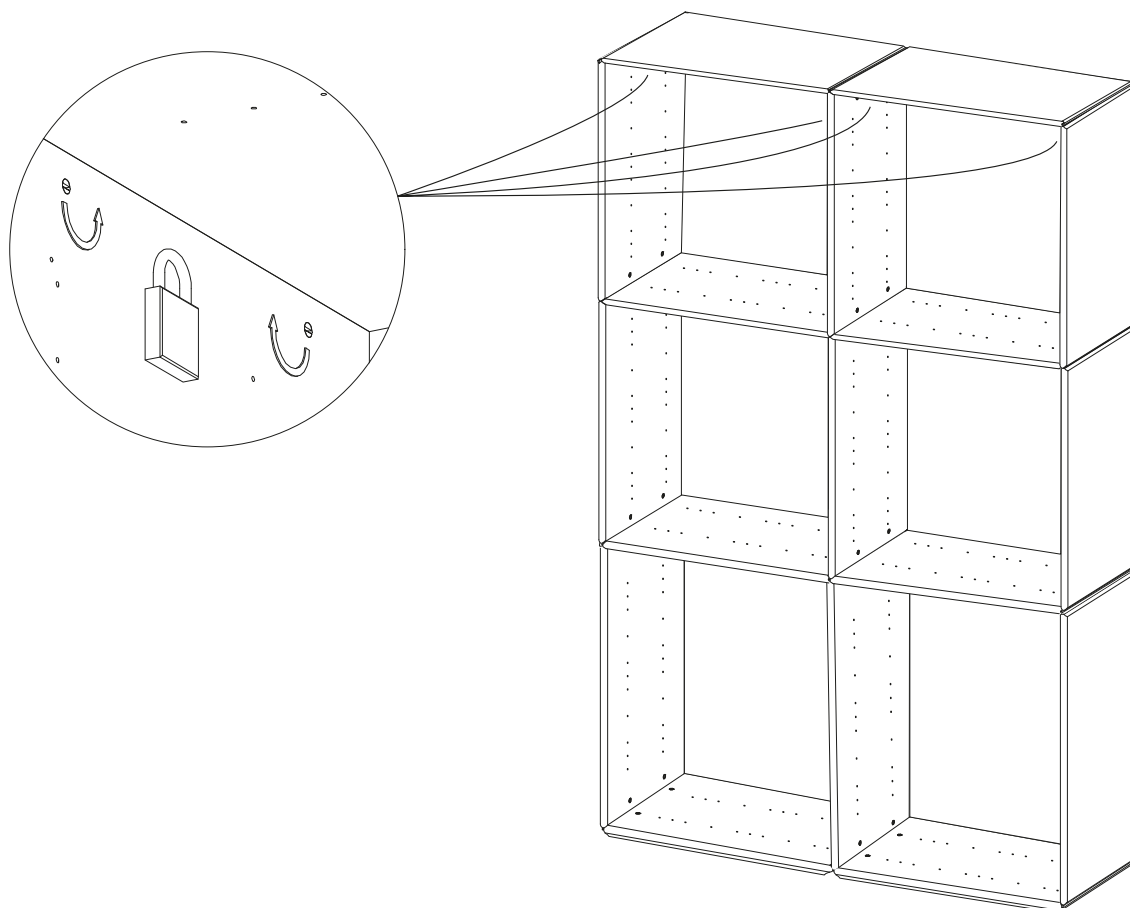


29

Flyt møblet på plads, før du sætter interiøret i.


Move the furniture into place before inserting the interior.

Stellen Sie die Möbel an ihren Platz, bevor Sie das Innenleben einsetzen.


Mettez le meuble en place avant d'insérer l'intérieur.

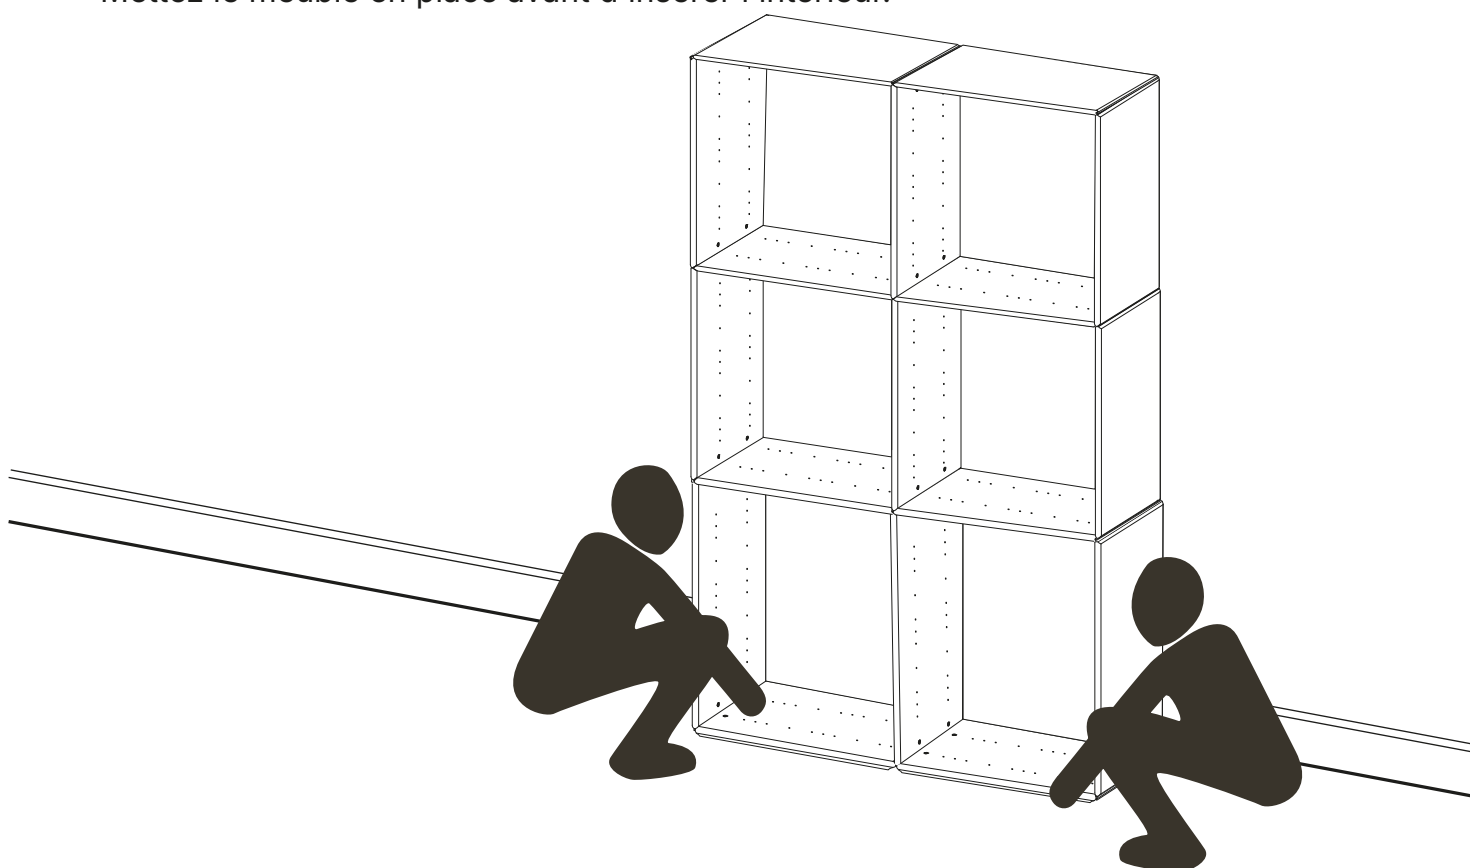


30

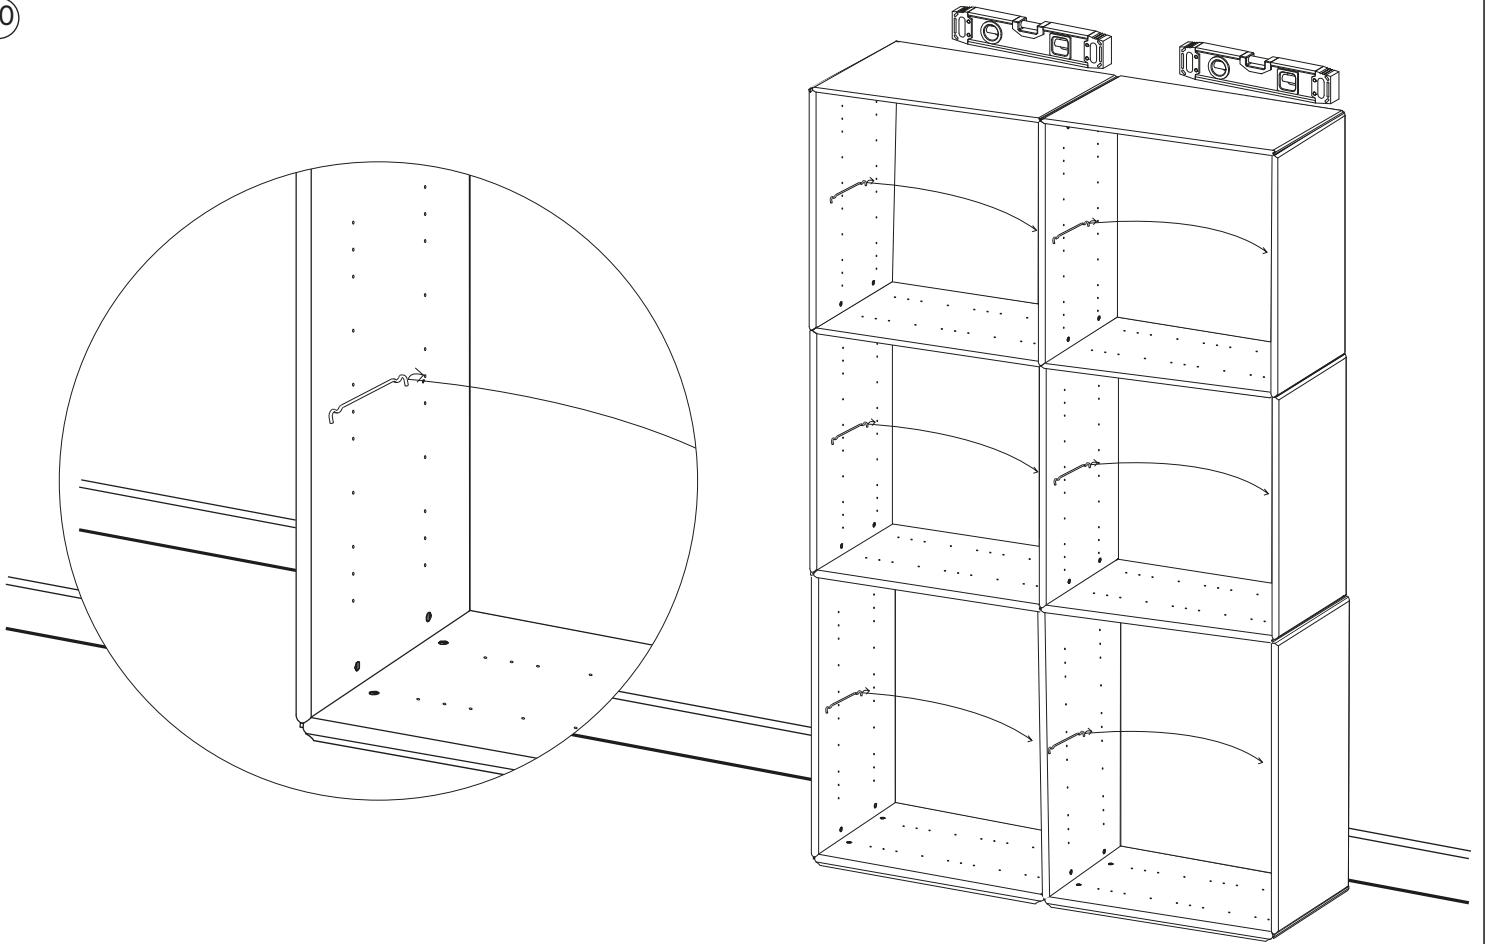


31

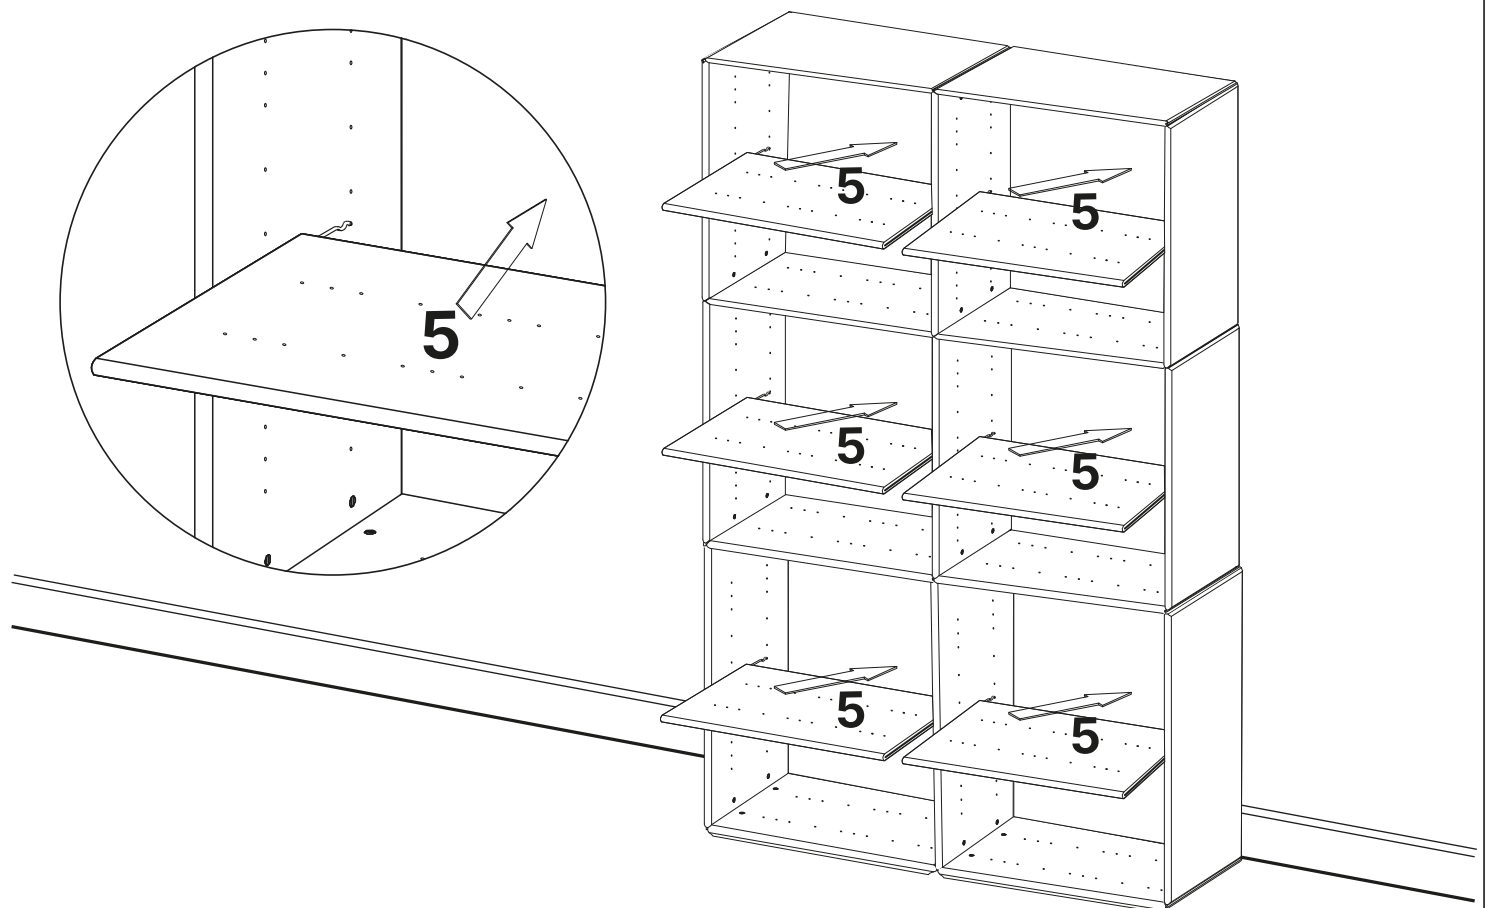

32

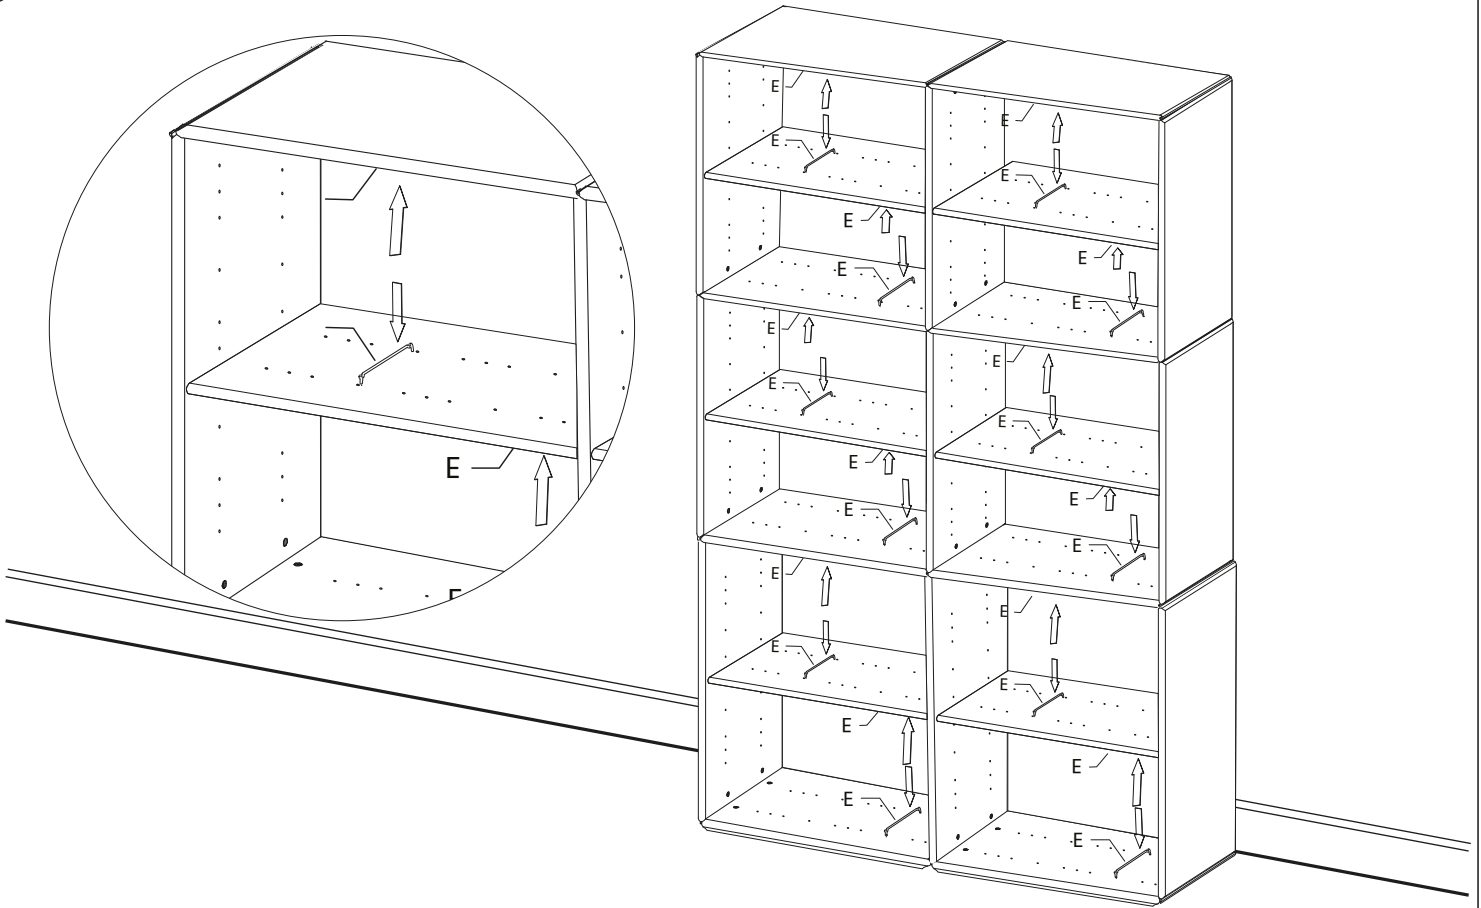

33

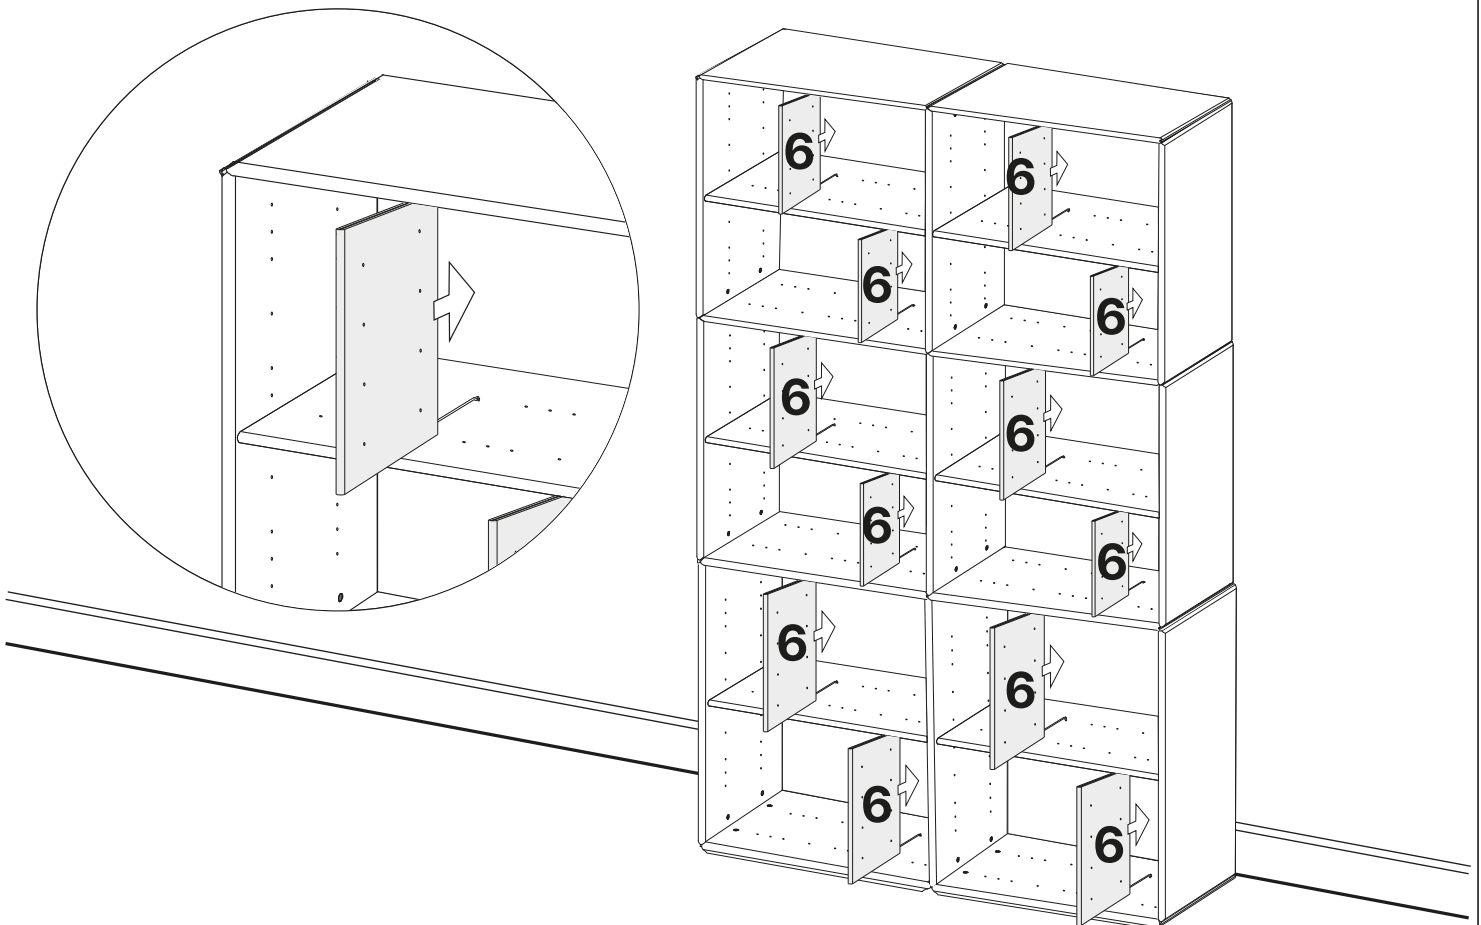

34

